

SS2408-08

(ACCESS CONTROL SYSTEM)

OPERATING MANUAL



For your protection, read these instructions completely

And keep them for future reference.

TABLE OF CONTENTS

Important Safety Instructions.....	3
Introduction.....	4
Parts List	4
Installation.....	5
Wiring Diagram	8
LED Indicators.....	8
Using the SS2408-08	9
1. Setting your call out numbers.....	9
2. Setting your dial in numbers.....	9
3. App on iOS and Android.....	9
Enter System Menu	10
Programming by text message	11
SMS/ Phone mode code	12
Command Codes	12
SMS Inquire	14
E-mail settings.....	15
Call list log setting (SMS).....	15
Call list data reply:	15
How To Change The Name Plate.....	16
How To Reset The Hardware When You Forget Your Password.....	17
Troubleshooting (Q &A).....	17
Specification.....	18

Thank you for purchasing SS2408-08 4G/3G audio intercom. Please read this manual carefully before using.

Be sure to keep this manual for future reference in case of any problem or question should arise.

Important Safety Instructions

When using this SS2408-08 4G/3G audio intercom, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury. Please read the following before using your equipment.

1. Follow all warning and instructions on the product.
2. Unplug all the connections of product before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
3. Do not use this product near water.
4. Do not use this product near an area where there is a potential of gas leaks or near any fumes that can be explosive.
5. Do not place this equipment near or over a radiator or any other heat source.
6. Do not overload the wall outlet or power cord where the power adapter is installed. This can result in fire or electric shock
7. Avoid spilling liquid on this equipment and do not insert any objects through the ventilation slots.
8. Avoid using the equipment during an electrical storm. There is a remote risk of electrical shock from lightning.

Introduction

SS2408-08 4G/3G audio intercom system is designed for multiple family complexes. It can dial up to 8 different families. When a visitor arrives at your property they will press call button on the intercom which will then connect to a phone number, landline or mobile (up to 3 numbers per resident or family, can be added which will be rung in sequence), once you answer the phone and speak to them you can then open the gate from your phone and let them in remotely from wherever you are in the world by pressing 1 to trigger relay 1 or press 4 to trigger relay 2

This system also has Mobile Access Control built in which recognizes your Caller ID and allows entry. You can open the gates by dialing the SIM card number held within the unit to open your gates, when a call is received, it is dropped and the Caller ID checked against numbers programmed and if there is a match, will send a signal to open, any unknown callers will be ignored.

The unit is easily wired into your gate and garage systems and it does not need any special installation or complicated wiring; it needs power only and an active SIM card.

Parts List

Item	Description	Q'ty
1	SS2408-08 4G/3G audio intercom	1
2	Power adapter	1
3	External 3-meter antenna	1
4	Mounting Bracket for antenna	1
5	Operating manual	1
6	6 Pin Cable	1
7	Terminal Blocks	1

Accessories

Terminal Blocks



6 Pin Cable



Power Cable



Antenna



Mounting Bracket





Power Adapter



Installation

This 4G/3G audio intercom is suitable for both flush mounting and surface mounting.

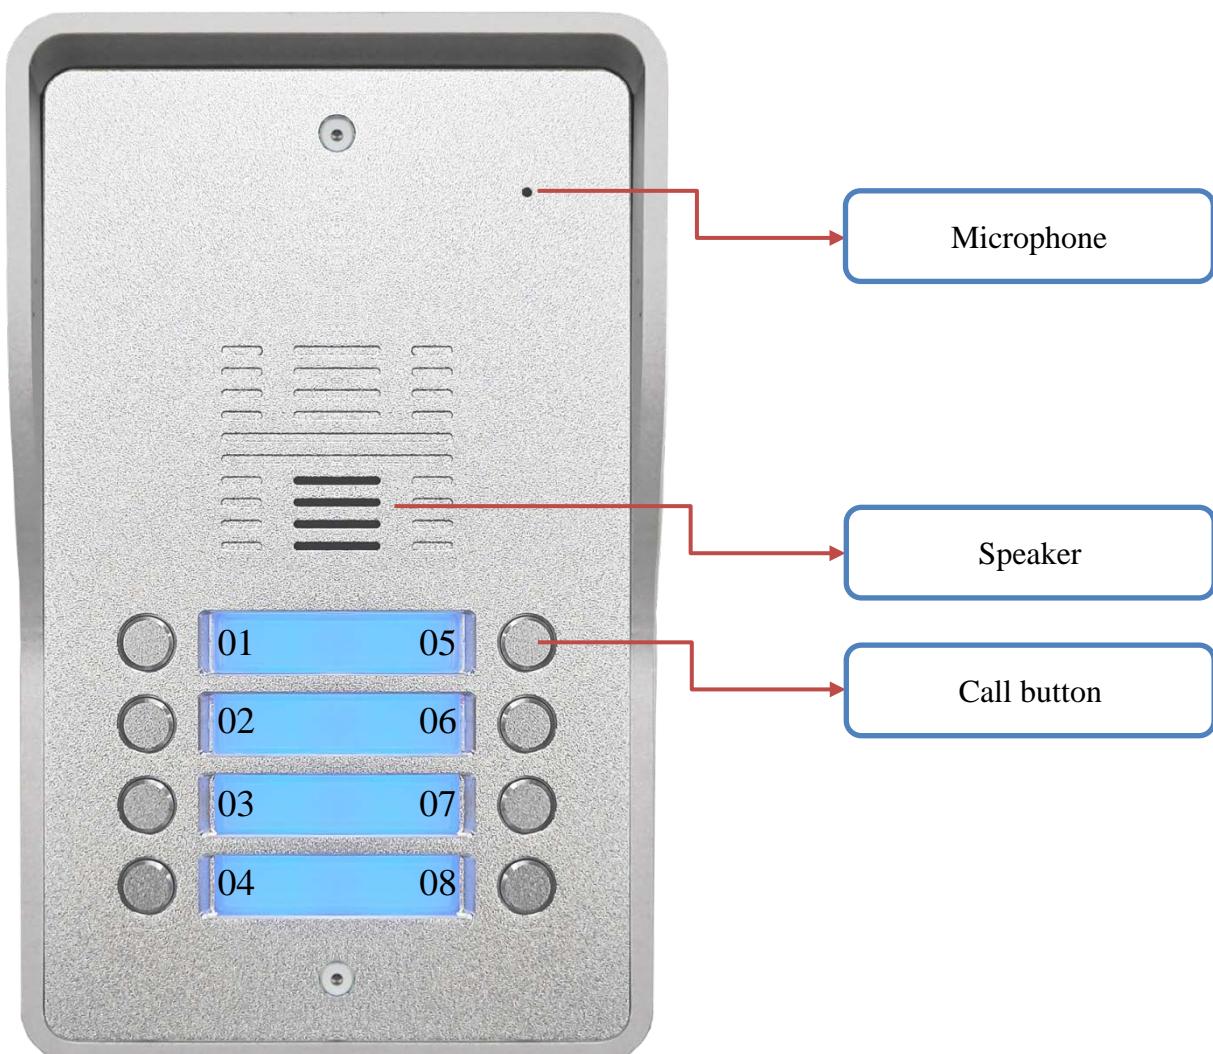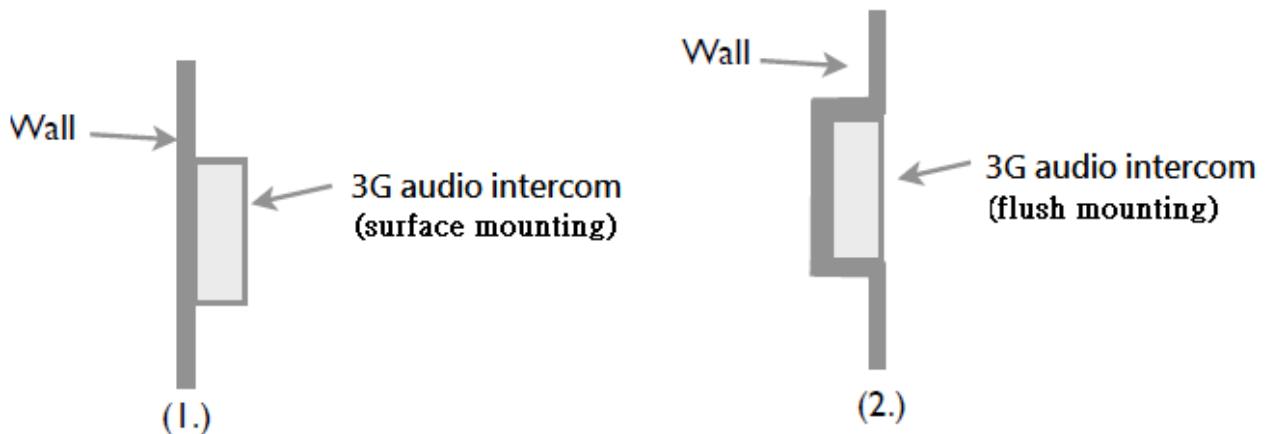


1. SIM card installation (Fig 1)

- 1.1 Disconnect the 12V adaptor from the SS2408-08
- 1.2 Remove the rear plastic cover
- 1.3 Remove the SIM card cover from the bottom of the unit
- 1.4 Slide the SIM card holder towards the front of the unit
- 1.5 Lift up the holder

1.6 Before inserting the SIM card, ensure that it is not PIN number locked. (If locked, use a mobile phone to unlock it).

- 1.7 Insert the SIM card (Note orientation of notched corner)
- 1.8 Replace holder and slide towards the rear of the unit to lock in place
- 1.9 Replace rear plastic cover

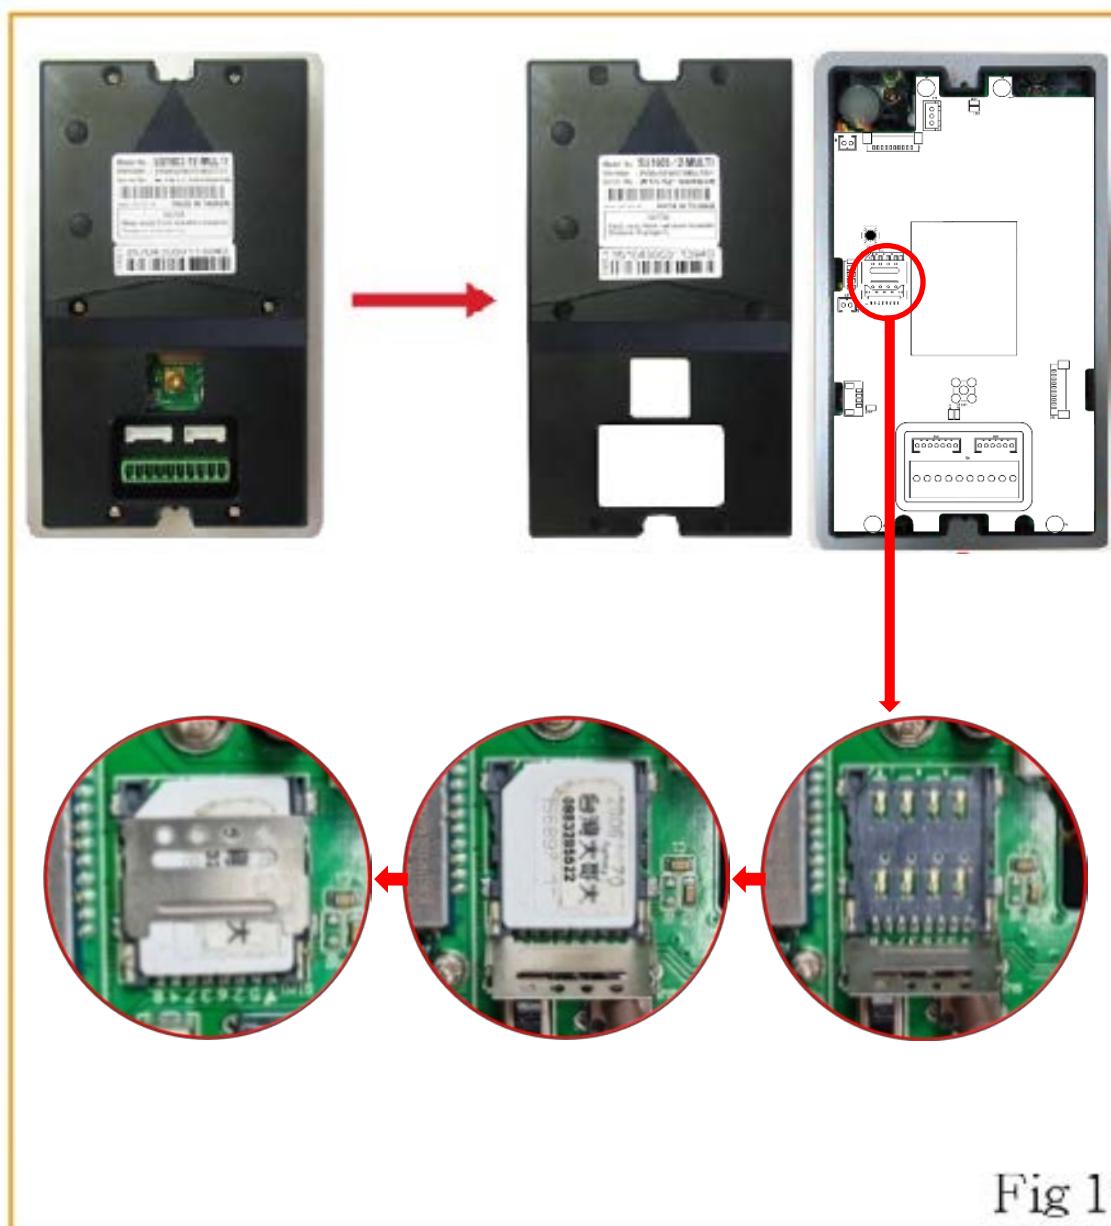

2. Connecting with the door lock system (Fig 2)

2.1 According your door lock type to wire with door latch of connector.

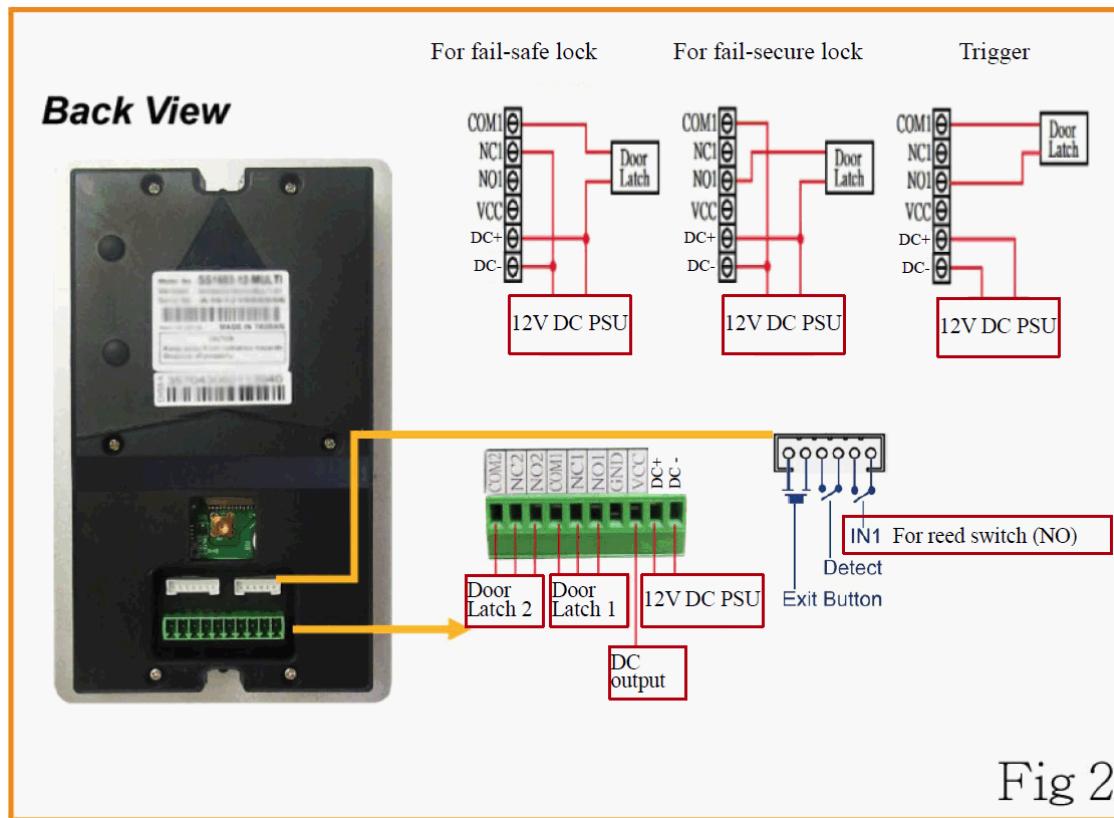


Fig 2

3. Connecting the Antenna (Fig 3)

3.1 Plug on the antenna cord to the connector on the rear of the unit

3.2 Place antenna away from electrical/electronic systems (computers, microwave ovens, etc)


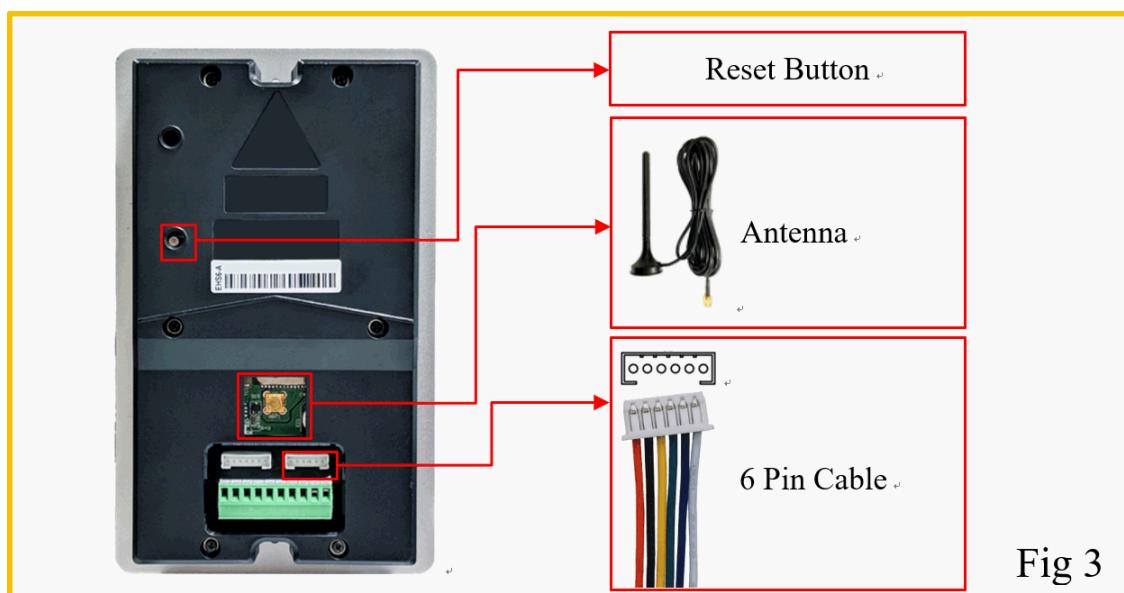


Fig 3

4. Power on and Fix it well

- 4.1 Connect the power adaptor into the connector marked AC
- 4.2 The blue indicator of call button should be on and you will hear Du Du tone.
- 4.3 Fix the unit on the position before ready.
- 4.4 When the Du Du tone is disappeared then the Device is ready.

Wiring Diagram

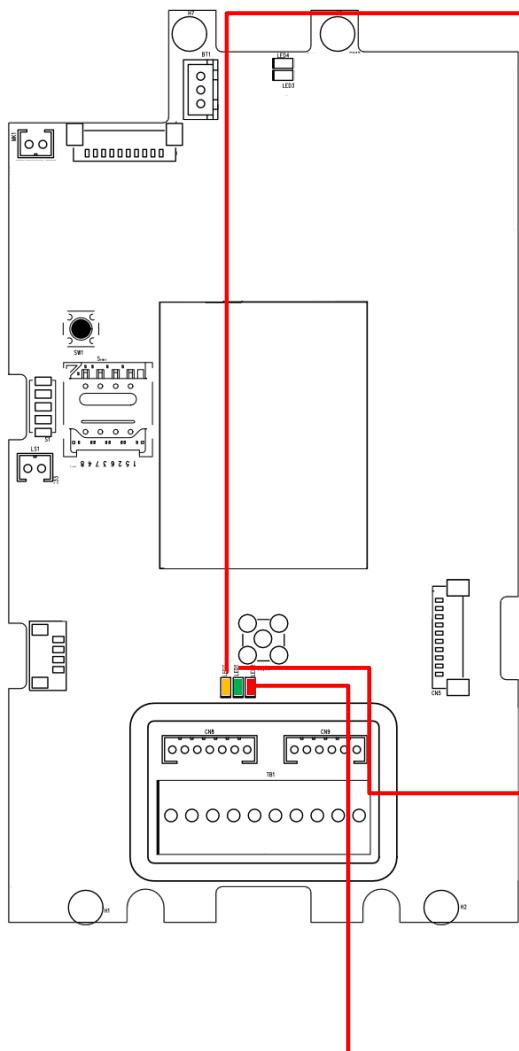

LED Indicators

Status

LED(Yellow)	
Power On	Indicator light OFF
SIM Card Check	Indicator blinks once per second
Registration Check	Indicator blinks twice per second
Module Initialization	Indicator blinks three times per second
Standby Mode	Indicator blinks once every two seconds
System Operation (e.g., sending SMS or configuring settings)	Indicator stays ON
In Call	Indicator blinks rapidly

Network

LED	Network
Green (ready)	Flashes once per 3 seconds
Green (searching)	Flashes once per second
Green (busy)	Solid

Power

LED	Power
Red (power on)	Solid
Red (power off)	Off

Using the SS2408-08

1. Setting your call out numbers

1.1 Send the text SMS to the number of device.

1.2 The format of text SMS is

***12*1234#91[Y][XX]*[phone number]#91[Y][XX]*[phone number]#...**

XX=01-08, it means the 8 call buttons.

Y=~1~5, it means three phone numbers

1.3 When the setting is finished, the sender will receive the reply as below.

91 [Y]*[XX] [phone number]#91 [Y]*[XX][phone number]#...OK

1.4 If you press the call button of device, it will call to the numbers of call buttons in sequence.

2. Setting your dial in numbers

2.1 Send the text SMS to the number of device.

2.2 The format of text SMS is

***12*1234#71[country code]#72[relay][call in number 1]# 72[relay][call in number 2]#...**

2.3 When the setting is finished, the sender will receive the reply as below.

71[country code]#72[relay][call in number 1]# 72[relay][call in number 2]#...OK

2.4 If you call to the number of device through the dial in numbers, the device will trigger the relay to control the door latch.

2.5 If the number is not matched with the dial in numbers, the device will answer and sound a beep. Then you can enter the programming mode by password.

3. App on iOS and Android

3.1 Please search **3G intercom** on Apple store or Google Play

3.2 The App can help you to program the device easier.

3.3 You can use the App to unlock the door through call or SMS.

Enter System Menu

1. Please call the number of the 4G/3G intercom device.
2. The device will answer and sound one beep to enter system menu.
3. Enter the password of the mode you would like to enter.
 - 3.1 Listener monitoring mode. **【*13*1212#】**
 - 3.2 Access control mode **【*33*5678#】**
 - 3.3 Program setting mode **【*12* 1234#】**
4. Password correct one beep, password error 3 beeps.
5. 3 times failure attempt on password, the device hang up the call.

Enter Listener Monitoring Mode

1. You will hear a “Do” tone to enter listener monitoring mode by pressing **【*13*1212#】** where 1212 is the monitoring password.
2. You can hear the live sound of the device’s surrounding environment but the speaker is OFF in monitor mode.
3. Enter "35#" to turn on the speaker Then you can talk tow-way audio and control the relay output.

Enter Access Control Mode

1. You will hear a “Do” tone to enter access control mode by pressing **【*33*5678#】** where 5678 is the access control password.
2. The door will be opened after enter the correct password
(To open the door by password, if the number is not stored in the access control section)

Enter Program setting Mode

1. You will hear a “Do” tone to enter into program setting mode by pressing **【*12* 1234#】** where 1234 is the setting password.
2. You are now in the “program setting mode”
Note: At the end of each command there can be one of the two indications:
Successful: a long “beep” tone, failed: three short “beep” tone.
3. To make changes on settings please refer to the command codes in page 12.
4. To end program setting mode just hang up.

NOTE:

*To be successful in programming, originate a call from a land line and enter the digits slowly or using programming by text message.

Programming by text message

Programming by text message is the simplest way to customize the settings of the 4G/3G audio intercom and add or delete telephone numbers. Simply send texts in the format to the telephone number of the SIM within the 4G/3G audio intercom.

Note:

1. A Single SMS text messages is limited to 140 characters.
2. You can program many different user command codes in one text message with SMS command format.
***12*1234 # [command Code 1] # [command Code 2] # [command Code 3] #...**
3. Each SMS must start with the pass code *12, default setting password 1234 in the following format ***12*1234 #** followed immediately by a command.
4. To program a call button numbers DO NOT enter country code, just the complete number as you would dial it.

Example:

Store a call button phone numbers (Max 5 numbers) and delete 2&3 phone numbers.

058 57235 (landline number 1)
086 5682554 (mobile number 2)
086 2235644 (mobile number 3)

Command to use: ***12*1234#91 [Y] [XX]*[phone number]#**
XX= call button 01~08
Y= number 1~5

SMS format: (store a call button phone numbers)

***12*1234#91108*05857235#91208*0865682554#91308*0862235644#**

SMS format: (delete 2&3 phone numbers of a call button)

***12*1234#91208**#91308**#**

User command code CORRECT

SMS format:

***12*1234#91108*05857235#91208*0865682554#91308*0862235644#**

SMS reply:

91108*05857235#91208*0865682554#91308*0862235644# OK

User command code ERROR (user command 192 error)

SMS format: ***12*1234#91108*05857235#1920865682554#91308*0862235644#**

SMS reply: **91108*05857235#1920865682554# Error**

SMS/ Phone mode code

No.	Feature	Command	NOTE:
1	Setting mode	*12*[setting password]#	Phone mode: Dial the phone and enter *12*1234 to enter the setting mode. (listen to DO), you can enter the command codes below. SMS: You can program many different command codes in one text message with SMS command format. *12*1234 # [command Code 1] # [command Code 2] # [command Code 3] #.....
2	Monitoring mode	*13*[setting password]#	Phone mode: Dial the phone and enter *13*1234 to enter the monitoring mode. SMS: Send SMS (*13*1212#) to the device and the device will call you back
3	Trigger Relay1	*33*[access control password] #	Phone mode: Dial the phone and enter *3(3, 4, 5)*5678 to (trigger, hold, release) relay1.
4	Hold Relay1	*34*[access control password] #	SMS: Send SMS [*3(3, 4, 5)*5678#] to the device and the device will (trigger, hold, release) relay1
5	Release Relay1	*35*[access control password] #	Phone mode: Dial the phone and enter *3(6, 7, 8)*5678 to (trigger, hold, release) relay2.
6	Trigger Relay2	*36*[access control password] #	SMS: Send SMS [*3(6, 7, 8)*5678#] to the device and the device will (trigger, hold, release) relay2
7	Hold Relay2	*37*[access control password] #	
8	Release Relay2	*38*[access control password] #	

Command Codes

You can program many different command codes in one text message with SMS command format.

*12*1234 # [command Code 1] # [command Code 2] # [command Code 3] #.....

No.	Feature	Command	Description	Default
1.	Change setting Password	01 [password] #	password:4 digit codes	1234
2.	Change access control password	02 [password] #	password:4 digit codes	5678
3.	Change monitoring password	03 [password] #	password:4 digit codes	1212
4.	Store or delete a call button phone numbers	91[Y][XX]*[phone number] #	XX= 01~08 Y= phone number 1,2,3,4 or 5 Phone number= 3~20 digits (One * can be delay 3 seconds)	 None

		91[Y][XX]** #	Delete phone number1, 2, 3	
5.	Speaker Volume	3 [speaker volume] #	speaker volume level= 0 ~ 4	3
6.	Microphone Volume	4 [microphone volume] #	microphone volume level= 0 ~ 4	3
7.	Relay 1 Trigger Time	51 [relay1 time] #	Relay 1 time= 1~9999 sec	1
8.	Relay 2 Trigger Time	50 [relay 2 time] #	Relay 2 time= 1~9999 sec	1
9.	Call Divert to next number time	52 [call divert time] #	Call divert time= 10~99 sec	20 sec
10.	Max Call Time	53 [max call time] #	Max call time= 005~999 sec	060 sec
11.	Max Monitoring time	55[duration time] #	duration time= 00 ~ 60 mins 00 (no limit time)	10 mins
12.	Call in mode	65[mode]#	mode = 1 Setting mode mode = 2 Call mode mode = 3 Reject mode (caller ID permit)	1
13.	Call in to open the door numbers (Max: 1500 numbers)	71 [country code] #	Country code= 1~3 digit codes	None
		72[relay] [phone number] #	Relay= 1 or 2	
		73 [phone number] #	Delete phone number	
		73*#	Delete all phone numbers	
14.	Add administrator phone number	74 [admin number] #	admin number= 3~15 digits (no number no restriction)	None
15.	Del administrator phone number	74*#	delete admin phone number	None
16.	Call list reply type	84+X#	X=0:no reply X=1:SMS X=2:E-mail Original setting 1 or 2, changing to 0 will delete “Call list” content	0
17.	Call list reply number(type: SMS)	85 [reply number] #	reply number=3~15digits	None
18.	Dele call list reply number	85*#	Dele call list reply number	None
19.	SMS reply notice of Relay status	894[X]#	X=0 (disable SMS reply) X=1 (enable SMS reply)	0
20.	Dial tone volume	898[X]#	X=1~3 (levels)	2
21.	Set Egress Pin output relay	900[X]#	X=0 (relay 1) X=1 (relay 2)	0
22.	Set Detect pin output relay (Detect Pin is egress mode)	901[X]#	X=0 (relay 1) X=1 (relay 2)	1
23.	Detect pin on PCB setup	902[X]#	X=0~3 0: disable 1: egress mode (901) 2: trigger 3. resistance=10KΩ(7.5K~13K)	0
24.	Emitting bleep when correct PIN code entered	903[X]#	X=0 (disable) X=1 (enable)	1
25.	Intercom moving Detection (Theft Proof)	904[X]#	X=0 (disable) X=1 (enable)	0
26.	Set Alert phone number (moving & trigger)	905[Y][phone number] #	Y= phone number 1,2 or 3 Phone number=3~15 digits	None
27.	Enable or disable IN1	907[X]#	X=0 (disable) X=1 (enable)	0
28.	Change the length of open code	940[X]#	X=1 (1 code open code) X=2 (2 codes open code)	1

29.	Change open codes of relay 1&2 including trigger / hold / release for independent apartment	93[XX]*[ABCDEF]#	XX= apartment number 01-08 A,B,C,D,E,F= 0~9 and * A= trigger relay 1 B= hold relay 1 C= release relay 1 D= trigger relay 2 E= hold relay 2 F= release relay 2	1	2
				code	code
30.	Reset	999#	reset default	None	

SMS Inquire (only one format per seal, length limit 140)

No.	Feature	Command	Reply content	
1	Check signal strength	*20#	Operator name , Network Signal Level = X	
			Network : GSM/WCDMA X= 0~31 , 0 : poor 31 : strong	
2	Check device save number	*21#	I+Call in(TEL),.....E(N)	
	Check device save number(mail)	*21#1	I : Call in number E : End N : Next SMS	
3	Check the RELAY status	*22#	Relay1=(status),Relay2=(status),Detect=(Input),IN1=(Input) status: hold/release/trigger Input: ON/OFF	
4	8 household call list and opening number	*31*setting password#[XX]#	 reply: N number – 1 , 2 , 3 , 4 , 5 , 6 1-TEL1 [If not set, only display 1-] 2-TEL2 [If not set, only display 2-] 3-TEL3 [If not set, only display 3-] XX: 01~08	
	Multiple households call list and opening number(mail)		If no account number is added, return all the number and phone number	
5	Send SMS message (when Detect Pin is triggered)	*26*[password] #[content]	Password=setting password content= up to 100 characters	Detect PIN Trigger
		26[password] #	Query current message content	
6	Send SMS message (when Intercom is moved)	*27*[password]#[content]	Password=setting password content= up to 100 characters	Case open
		27[password]	Query current message content	
7	Send SMS message (when external power is off) (works for inside battery)	*28*[password]#[content]	Password=setting password content= up to 100 characters	Power loss
		28[password]#	Query current message content	
8	Send SMS message (when external power is active) (works for inside battery)	*29*[password]#[content]	Password=setting password content= up to 100 characters	Power active
		29[password]#	Query current message content	
9	Send SMS message	*30*[password]#[content]	Password=setting	IN1 trigger

	(when IN1 is triggered)		password content= up to 100 characters	
		30[password]#	Query current message content	

E-mail settings

No.	Feature	Command	
1	GPRS setting	*40*setting password#APN, AUTH_type,APN User name,APN Password# NOTE: AUTH_type:0: none 1:PAP 2:CHAP	
2	E-mail setting	*41* setting password #type,SMTP server,Port,User name,Password,E-mail address, E-mail sender name# NOTE: Type: 0: Normal 1: SSL 2:TLS	
3	Recipient & copy. Can be no set, but (,) to keep	*42*setting password# normal recipient address, Recipient name, Carbon Copy recipient, Recipient name#	
4	Letter subject	*43*setting password#E-mail subject#	
5	Query Email Settings	*4(0~3)*setting password#	0: GPRS setting 1: E-mail setting 2: Recipient & copy 3. Letter subject
6	Instant return(send Email)	*44*setting password#	SUCCESS(Mail sent) FAIL

Call list log setting (SMS)

1. Send the text SMS to the number of device.
2. The format of text SMS is
12[setting password]#841#85[Call list reply number]#
3. When the setting is finished, the sender will be received TEXT reply as below:
841#85[Call list reply number]#OK

P.S. When dial-in number log record 100 calls, it will SMS immediate to reply number

P.S. To immediately send current dial in numbers log via email or SMS, The format of text SMS is
44[setting password]#

Call list Example:

001-09/02/21,13:50:45- S 10968297738-1#
002-09/02/21,13:50:45- O 10968297738-2#
003-09/02/21,13:50:45- I 10968297738-3#

Call list data reply:


NO.	-	MM/DD/YY	,	Hh:mm:ss	-	Code	Relay	Number	-	Relay status	#
-----	---	----------	---	----------	---	------	-------	--------	---	--------------	---

Code:	Relay:	Number:	Relay status:
O: incoming call without action I: incoming call to trigger relay P: PIN code to trigger relay M: monitor call to activate relay R: incoming call and enter password to activate relay S: SMS to activate relay T: during the call, householder to activate relay	0: no relay 1: relay 1 2: relay 2	- Phone number - Householder number* stored number order - PIN code	1: relay 1 trigger 2: relay 1 hold 3: relay 1 release 4: relay 2 trigger 5: relay 2 hold 6: relay 2 release

NOTE: The early version log shows "NO@", and the new version log shows "NO-", they are the same

How To Change The Name Plate

1.

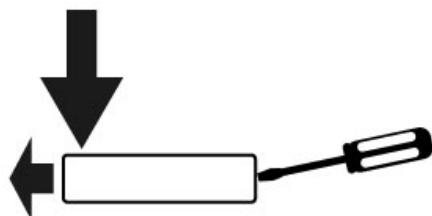

Push the left edge and move to left. Insert the screw driver in the right edge. Turn and push the plastic upwards

2.



Take off the plastic.

3.




Name Plate



Plastic


Change the name plate.

4.

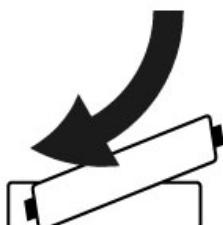


Then insert the left edge into sideling.

5.

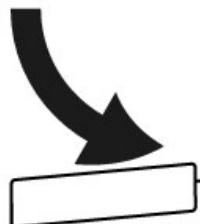

Push the right edge and move to right

How To Reset The Hardware When You Forget Your Password

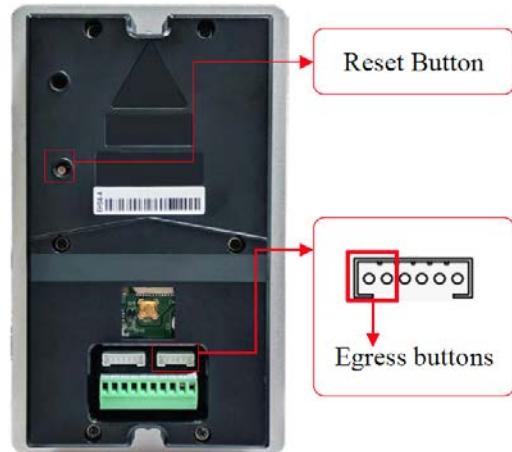

1. Keep both reset and egress buttons pressed
2. Release all buttons after you hearing continuous “Dou” tones
3. The device will restart and hardware reset is done

Troubleshooting (Q &A)

Q. The unit keeps bleep.

A. This means the unit is not able to detect the network for some reason.
 -Check the SIM card is activated and has calling credit.
 -Power off the unit, remove the SIM and check it in a mobile phone to verify it can make a call.
 -Check if the PIN code of SIM disable when put in a phone.
 -Check the reception is good. Poor reception is not sufficient.
 -Check the antenna has been mounted as high as possible, not near large metal objects, or wet green shrubs etc.

Q. The unit calls the first number, but there is not enough time to answer before it diverts to the next number.

A. Increase the no answer time as per programming instructions.

Q. The unit calls the first number but voicemail comes on before it can ring the second number.

A. Decrease the no answer time as per programming instructions.

Q. The caller ID part does not work.

A. Be sure to program the caller ID part under 72 feature. If your number is a private or number withheld, then it will not work.
 Even if you have already programmed a number to receive a call from the intercom, if you also want that number to have caller ID access, it must be programmed under the 72 feature also.
 Ensure the number is entered as you would normally dial it from another phone.

Q: When the device dials out and reaches a voicemail, how can it hang up and call the next number?

A: Press and hold the Call button for about 2–3 seconds. After hearing three “beep” tones, the device will automatically disconnect from the voicemail and proceed to dial the next phone number.

Q. There is no audio from the gate, but the person at the gate can hear ok.

A. This can be due to low reception.
 -Check reception level by *20#.
 -Change SIM card to another network which may have better coverage.
 -Purchase a high gain antenna.

Q. The audio quality that can be heard on the remote telephone is poor or humming (buzzing).

A. A small amount of GSM buzz can be considered normal on 4G/3G audio intercoms, but not so much that causes inability to hear the person speaking. This can be caused by the GSM antenna being mounted too close to the speech panel or not mounted high enough.
 -Try earthing the speech panel chassis to 0V of the power supply.
 -This is also a symptom of poor reception. Try above steps on checking and improving reception.

Q. The 1 or 2 key does not work when the intercom calls a phone.

A. Check if you can hear the relay clicking at the gate when the 1 or 2 key is pressed during a call. If it can be heard, then the system is working, check wiring between the relay and the lock or gate panel. If the relays do not make a clicking sound, then check this feature on a different mobile cell phone or landline. If it works on a different phone, check the settings on the phone in question under DTMF tones. Failure of DTMF tones to operate correctly is also a symptom of low reception. Check steps above on improving reception. Try pressing the buttons longer when attempting to activate the gates or door.

Specification

Model	SS1808-08 4G/3G Audio Intercom
GSM / WCDMA / 4G Frequency	2G / GSM 850/900/1800/1900 MHz, 3G / WCDMA 800/850/900/1900/2100 MHz 4G / LTE (EC) LTE FDD: B1/B3/B7/B8/B20/B28A 4G / LTE (A) LTE FDD: B2/B4/B12 4G / LTE (AU) LTE FDD: B1/B2/B3/B4/B5/B7/B8/B28 LTE TDD: B40
Face plate	180 (H) x 109 (W) mm
Surface back box	189 (H) x 118 (W) x 65(D) mm
Length of antenna	3 meters cable
Power supply	DC 12V
Design and material	Vandal resistant / die cast aluminum
Humidity	Less than 80% RH
Operating Temperature	-20°C to 50°C
Operating Current	Maximum 250 mA, Typically 55mA